



 **FERNO[®] MORTUARY**

| | | |
|-------------------|--|--------------------|
| QUALITY | | YOU DESERVE |
| EXPERIENCE | | YOU CAN RELY ON |
| INNOVATION | | YOU CAN BELIEVE IN |



Our Vision

Seeking innovation that drives our passion for superior emergency services.

Our Mission

Every day, Ferno cares and listens to create a safer world for you.

Our Purpose

Seeking to be trusted advisors, by listening to understand your needs, inspires us to create and deliver valued solutions in premier EMS, Rescue, Fire, Police, and Mortuary services.

Table of Contents

| | | | |
|---|----|--|----|
| FIRST CALL | | 4-17 | |
| 24-MiniMAXX® Mortuary Cot | 4 | Model 325 First Call Cover | 16 |
| 24-MAXX Mortuary Cot | 5 | Model 330 First Call Cover | 16 |
| Model 24 Multi-Level Cot | 6 | Model 335 First Call Pouch | 17 |
| Model 27-1 Multi-Level Cot | 7 | 24-MAXX® First Call Pouch | 17 |
| Model 23 Roll-In Style Cot | 8 | 24-MiniMAXX® First Call Pouch | 17 |
| Mini Cot Roll-In Style Cot | 9 | Crypton® Fabrics | 17 |
| Model 372 Cot Mattress | 10 | Monogramming | 17 |
| Model 375 Tapered Cot Mattress | 10 | | |
| 24-MAXX® Cot Mattress | 10 | PREPARATION | |
| 24-MiniMAXX® Cot Mattress | 10 | 18-23 | |
| Model 414-OL Over-The-Lap-Restraints | 10 | Model 101-H Hydraulic Operating Table | 18 |
| Model 414-R Wrist Restraints - Cot Sidearm | 10 | Model 102 Folding Operating Table | 20 |
| Model 415-AR Ankle Restraints | 11 | Model 103 Combination Operating Table | 21 |
| Model 430 Two-Piece Restraints | 11 | Model 4000 Ultra Care™ Lift | 22 |
| Model 5 Mortuary Fastener | 11 | Model 34 Folding Dressing Table | 23 |
| Model 533 Wheel Cups | 11 | Model 36 Dressing Table | 23 |
| Model 534/535 Post Cups | 11 | | |
| Ferno Mortuary Scoop EXL™ | 12 | FUNERAL | |
| Model 65 Scoop™ Stretcher | 12 | 24-29 | |
| Model 64 Body Scoop™ Stretcher | 12 | Cemetery Church Truck | 24 |
| Model 14 Slide-Under Body Lifter | 13 | Model 87 Church Truck | 25 |
| Ferno Transfer Board | 13 | Model 88 Church Truck | 25 |
| Beasy Trans™ Transfer Board | 13 | Model 87-F/Model 88-F Drape Frame Attachments | 26 |
| Model 132 Manta™ Retrieval Aid | 13 | Model 87-D/88-D Drapes | 26 |
| Model 11-T Stretcher | 14 | Model 401/402 Church Truck Covers | 26 |
| Model 11 Stretcher with Wheels | 14 | Model 110 Showroom Truck | 27 |
| Model 131 Flexible Stretcher | 15 | Model 110-F Drape Frame Attachment | 27 |
| Model 135 Stretcher/Body Bag | 15 | Model 110-D Showroom Truck Drape | 27 |
| Model 338 Disaster Pouch | 15 | Model 112 Showroom Truck | 28 |
| Model 347-1 Disposable Pouch | 15 | Model 124 Adjustable Casket Table | 29 |
| 24-MAXX® First Call Cover | 16 | Model 156 Roller System | 29 |
| Model 320 First Call Cover | 16 | Tailgate Roller Assemblies | 29 |
| Model 321 First Call Cover | 16 | | |
| | | Policies & Disclaimers | 30 |
| | | Index | 31 |

24-MiniMAXX® Mortuary Cot



Add-On Features



Optional Rolling Wheel Kit
080-0555



Side-Lift Handles (Pair)
0821998



Sidearms
0821997



Replacement Mattress
0314042



Cover
0314154

Product Overview

The 24-MiniMAXX has all of the innovative features of the 24-MAXX in a narrow package. Able to handle large bodies with ease. The narrow bed surface provides increased maneuverability and allows two cots to be placed side-by-side in the rear of most vehicles. Comes complete with a 1-inch mattress and two seven-foot, two-piece black restraints, and is compatible with most Ferno covers and pouches. **The 24H-MiniMAXX includes all the great features of the 24-MiniMAXX and is specially designed for high-floor vehicles.**

Key Features

- True independent legs with multi-level adjustment
- 1000 lb capacity
- Six-inch wheels
- Dual hand controls
- Distinguished durable gloss-black powder-coated finish

Product

- 24-MiniMAXX
- 24H-MiniMAXX
- 24-MiniMAXX with Sidearms Installed
- 24H-MiniMAXX with Sidearms Installed
- 24-MiniMAXX with Side-Lift Handles Installed
- 24H-MiniMAXX with Side-Lift Handles Installed

SKU

- 0032501
- 0032504
- 0032502
- 0032505
- 0032503
- 0032506

SPECIFICATIONS

| | Length | Width | Height Max. | Height Min. | Weight | Load Limit | Loading Height |
|--------------|-----------------|--------------------|-----------------|----------------|------------------|---------------------|----------------|
| 24-MiniMAXX | 76" (193 cm) | 23 5/8" (60 cm) | 40" (100 cm) | 14" (35 cm) | 76 lb (34 kg) | 1000 lb (454 kg) | 26" (66 cm) |
| 24H-MiniMAXX | 76" (193 cm) | 23 5/8" (60 cm) | 40" (100 cm) | 14" (35 cm) | 76 lb (34 kg) | 1000 lb (454 kg) | 32" (81 cm) |

24-MAXX® Mortuary Cot



Add-On Features



Optional Rolling Wheel Kit
080-0555



Side-Lift Handles (Pair)
0821998



Sidearms
0821997



Replacement Mattress
0313998



Cover
0314154

Product Overview

The 24-MAXX allows you to transport bodies weighing up to 1000 pounds while reducing the risk of back injuries. The cot allows easy maneuverability in tight areas and down stairs, and has a powder-coated frame and stylish design. The 24-MAXX, with a variety of innovative features, offers the dependable performance you've come to expect from Ferno, the industry leader.

Key Features

- Independent leg design
- Oversized wheels
- Two seven-foot, two-piece black restraints

Product

24-MAXX
24-MAXX with Sidearms Installed
24-MAXX with Side-Lift Handles Installed (1 pair)

SKU

0032498
0032500
0032499

SPECIFICATIONS

| | Length | Width | Height Max. | Height Min. | Weight | Load Limit | Loading Height |
|---------|-----------------|----------------|-----------------|----------------|------------------|---------------------|----------------|
| 24-MAXX | 76" (193 cm) | 26" (66 cm) | 40" (102 cm) | 14" (35 cm) | 78 lb (35 kg) | 1000 lb (454 kg) | 26" (66 cm) |

Model 24 Multi-Level Cot



Add-On Features



Side-Lift Handles (Pair)
0821998



2-Piece Restraints



Sidearms



Telescoping Handles
0087150

Product Overview

The Model 24 Multi-Level, Roll-In Style Cot allows one person to perform retrieval without assuming the full weight of the cot and body. In confined areas, acts as a highly maneuverable, two-wheeled stretcher when the undercarriage is folded and locked.

Key Features

- Special release levers to raise and lower effortlessly
- Loading End Legs unfold and lock automatically
- Built-in stair glides
- Multi-level feature for easy moving from bed to cot
- Cot designed to be a portable stretcher

Product

| | |
|--|---------|
| Model 24 Mortuary Cot | 0032400 |
| Model 24 Mortuary Cot with Sidearms | 0032410 |
| Model 24 Mortuary Cot with Wheel Locks (2) | 0032450 |
| Model 24 Mortuary Cot with Sidearms, Wheel Locks (2) | 0032487 |

The Model 24-H includes all the great features of the Model 24 and is specially designed for high-floor vehicles.

| | |
|--|---------|
| Model 24-H Mortuary Cot | 0032420 |
| Model 24-H Mortuary Cot with Sidearms | 0032490 |
| Model 24-H Mortuary Cot with Wheel Locks (2) | 0032488 |
| Model 24-H Mortuary Cot with Sidearms, Wheel Locks (2) | 0032486 |
| Model 372 Mattress | 0311360 |

SPECIFICATIONS

| | Length | Width | Height Max. | Height Min. | Weight | Load Limit | Loading Height |
|------------|-----------------|----------------|----------------|----------------|--------------------|--------------------|----------------|
| Model 24 | 77" (193 cm) | 21" (53 cm) | 32" (82 cm) | 10" (24 cm) | 51 lb (24.5 kg) | 400 lb (181 kg) | 26" (61 cm) |
| Model 24-H | 76" (193 cm) | 21" (53 cm) | 33" (84 cm) | 10" (24 cm) | 54 lb (24.5 kg) | 400 lb (181 kg) | 31" (79 cm) |

Model 27-1 Multi-Level Cot



Add-On Features



Swivel Wheels



2-Piece Restraints



Side-Lift Handles (Pair)
0821998



Sidearms

Product Overview

The Model 27-1 Multi-Level, Roll-In Style Cot blends classic design with innovative features. Easy to maneuver in close quarters and narrow doorways and allowing easy access to the body. The multi-level undercarriage provides flexibility in retrieval. Comes with a burgundy, Model 375 one-inch mattress and two Model 430 five-foot-long, two-piece black quick-release restraining straps.

Key Features

- All four wheels swivel
- Folding end-section on cot shortens cot by 9"
- Tapered head section for tight corners
- Loading-end wheels lock as necessary
- Available sidearms

Product

27-1 First Call Cot
27-1 First Call Cot with Sidearms
27-1 Mattress

SKU

0032485
0032484
0313059

SPECIFICATIONS

| | Length | Width | Height Max. | Height Min. | Weight | Load Limit | Loading Height |
|------------|------------------|----------------|----------------|----------------|------------------|--------------------|----------------|
| Model 27-1 | 78¾" (200 cm) | 24" (61 cm) | 34" (86 cm) | 10" (25 cm) | 62 lb (28 kg) | 400 lb (181 kg) | 25" (64 cm) |

Model 23 Roll-In Style Cot



Add-On Features



Side-Lift Handles (Pair)
0821998



2-Piece Restraints



Sidearms



Telescoping Handles
0087150

Product Overview

With an extra-long wheel base to provide exceptional stability, its slide-action leg lock securely locks both sets of legs simultaneously when folded. With its legs folded and locked, it can be used as a two-wheeled stretcher. Stair glides reduce wear on the cot and promote smooth movement down stairs. The cot is also wide enough to accommodate a portable stretcher. Comes complete with a Ferno Model 372 one-inch burgundy mattress and two Model 430 five-foot-long, two-piece, black quick-release restraint straps. Other accessories are available.

Key Features

- Extra long wheel base for stability
- Slide action leg lock
- Can be used as two-wheeled stretcher
- Stair glides reduce wear and tear

Product

Model 23 Mortuary Cot
Model 23 Mortuary Cot with Sidearms
Model 372 Mattress

SKU

0032300
0032489
0311360

SPECIFICATIONS

| | Length | Width | Height Max. | Height Min. | Weight | Load Limit | Loading Height |
|----------|-----------------|----------------|----------------|----------------|------------------|--------------------|----------------|
| Model 23 | 76" (192 cm) | 21" (53 cm) | 32" (80 cm) | 10" (24 cm) | 44 lb (20 kg) | 400 lb (181 kg) | 26" (66 cm) |

Mini Cot Roll-In Style Cot



Add-On Features



Independent Legs



Cover
0314158

Product Overview

Compact and lightweight, designed for pet removal or small body retrieval. Its One-Man®, roll-in style allows one person to perform retrieval and has extendable loading wheels for easy loading and unloading. Special release levers make it possible to raise and lower the cot without assuming the full weight of the cot and body. Two 5' Model 430-P restraints are included.

Key Features

- Compact and lightweight
- Designed for pet or small body retrieval
- Allows for one-person retrieval
- Extendable loading wheels for easy loading and unloading

Product

Mini Cot
Model 579 Fastener

SKU

0403026
0565790

SPECIFICATIONS

| | Length | Width | Height Max. | Height Min. | Weight | Load Limit | Loading Height |
|----------|------------------|----------------|-----------------|---------------|--------------------|--------------------|-----------------|
| Mini Cot | 55½" (141 cm) | 22" (56 cm) | 29½" (75 cm) | 9" (23 cm) | 63 lb (28.5 kg) | 300 lb (136 kg) | 23½" (60 cm) |



Model 372 Cot Mattress

The Model 372 Cot Mattress is constructed with a one-inch polyurethane, foam pad covered with vinyl-coated nylon. The cover is wear and abrasion-resistant, bacteriostatic, fire-resistant, and easy to clean. Available in burgundy. Fits model 24 and 23 cots.

| Measures | Product | SKU |
|-------------------------------------|------------------------|---------|
| 72" x 18" x 1" (182 x 46 x 3 cm) | Model 372 Cot Mattress | 0311360 |

Model 375 Tapered Cot Mattress

The Model 375 Tapered Cot Mattress is constructed with a one-inch polyurethane, foam pad cover with vinyl-coated nylon. The cover is wear and abrasion-resistant, bacteriostatic, fire-resistant, and easy to clean. Available in burgundy. Fits the Model 27-1 First Call Cot.

| Measures | Product | SKU |
|-------------------------------------|--------------------------------|---------|
| 72" x 19" x 1" (182 x 48 x 3 cm) | Model 375 Tapered Cot Mattress | 0313059 |

24-MAXX® & 24-MiniMAXX® Mattresses

These mattresses are constructed with a one-inch polyurethane, foam pad cover with vinyl-coated nylon. The cover is wear and abrasion-resistant, bacteriostatic, fire-resistant, and easy to clean. Available in black.

| 24-MAXX Mattress Measures | Product | SKU |
|-------------------------------------|------------------|---------|
| 71" x 24" x 1" (180 x 61 x 3 cm) | 24-MAXX Mattress | 0313998 |

| 24-MiniMAXX Mattress Measures | Product | SKU |
|----------------------------------|----------------------|---------|
| 70" x 21" x 1" (178 x 55 x 3 cm) | 24-MiniMAXX Mattress | 0314042 |

Model 414-OL Over-The-Lap Restraints

Over-The-Lap Wrist Restraints fasten to both sides of the cot frame and hold the patient's wrists on the lap. Each side is adjustable so the patient's wrists can be centered over the midline of the body. Wrists are secured independently by hook-and-loop closures. Made of 2" nylon webbing and chrome-plated hardware. The main strap is 68" (173 cm), and the wrist straps are 15" (39 cm). Available in orange and burgundy.

| Product | SKU |
|--|---------|
| Model 414-OL Over-The-Lap Restraints, Burgundy | 0313090 |
| Model 414-OL Over-The-Lap Restraints, Orange | 0312320 |

Model 414-R Wrist Restraints – Cot Sidearm

When fastened to the side frame, this restraint holds the patient's wrist securely to the top of the side frame. Made of 2" wide nylon webbing, the restraints come as a pair in orange or burgundy.

| Product | SKU |
|--|---------|
| Model 414-R Wrist Restraints – Cot Sidearm, Burgundy | 0313088 |
| Model 414-R Wrist Restraints – Cot Sidearm, Orange | 0312310 |



Model 415-AR Ankle Restraints

Ferno's Ankle Restraints fasten to both sides of the cot frame to hold the patient's ankles securely in place. Independent restraints allow each leg to be individually secured or released from the hook-and-loop closures. Constructed of 2" nylon webbing. Restraints are 41" (104 cm) long. Available in orange and burgundy.

| Product | SKU |
|---|---------|
| Model 415-AR Ankle Restraints, Burgundy | 0313089 |
| Model 415-AR Ankle Restraints, Orange | 0312330 |



Model 430 Two-Piece Restraints

These restraints are made of 2" nylon webbing with quick-release, automotive type, chrome-plated metal buckles that resist rust and corrosion. Push-button operation allows secure fastening and easy release. Hemmed tab prevents strap from being pulled free of buckle. Available in black only. Available in either 5' or 7' lengths.

| Product | SKU |
|---|---------|
| Model 430, 5' Two-Piece Restraints, Black | 0313892 |
| Model 430, 7' Two-Piece Restraints, Black | 0313911 |



Model 5 Mortuary Fastener

This fastener is permanently mounted to floor plates to secure cots and stretchers, including the Models 23, 24, 24H, 24-MAXX®, 24-MiniMAXX® and 27-1 Series. Thumbscrews permit easy installation and removal. The rear-fastener hook stores flat when not in use and rotates up to fasten as a ratchet mechanism when needed. Specify your stretcher model when ordering. Not for use in crash-stable applications.

| Product | SKU |
|--|---------|
| Model 5 Fastener | 0565000 |
| Model 579 Fastener for Mini Cot (not pictured) | 0565790 |



Model 533 Wheel Cups

Wheel cups inhibit stretcher movement within a vehicle. Polished aluminum wheel cups are available individually for 4" and 7" (wheelchair) wheels.

| Product | SKU |
|---------------------------------|---------|
| Model 533, 4" Wheel Cups (each) | 0815334 |
| Model 533, 7" Wheel Cups (each) | 0815337 |



Model 534/535 Post Cups

Post cups hold stretcher posts firmly in place on the vehicle floor. Available in pairs only, these cups are permanently mounted.

| Product | SKU |
|-------------------------------------|---------|
| Model 534 Recessed Post Cups (pair) | 0815340 |
| Model 535 Raised Post Cups (pair) | 0815350 |





Ferno Mortuary Scoop EXL™

The ergonomically designed Ferno Mortuary Scoop EXL™ may be placed under the body without rolling or lifting the body. Simply uncouple the end clasps, slide the Scoop under the body with a scissor motion, and re-couple. The Scoop adjusts to three lengths to accommodate various body sizes and its easy-to-clean polymer surface is impervious to fluids. Comes complete with three restraints.

Product
Scoop EXL™, Gray

SKU
0107965



Model 65 Scoop™ Stretcher

Designed to be uncoupled on either or both ends and gently scoop up the body using a scissor-type closing motion. All-aluminum construction is lightweight and durable. The 65 Scoop™ is adjustable lengthwise to accommodate various body sizes. Comes with three restraints.

Product
Model 65 Scoop™ Stretcher

SKU
0000451



Model 64 Body Scoop™ Stretcher

The Model 64 Body Scoop may be placed under the body without rolling or lifting the body. The quick-release hinges separate at each end for positioning under the body. Simply snap the sides together and place inside the Model 330 First Call Cover, 335 First Call Pouch, or directly on the cot mattress. The Body Scoop is made of sturdy, lightweight aluminum. Restraints may be purchased separately.

Product
Model 64 Body Scoop™

SKU
0106400

SPECIFICATIONS

| | Length Open | Folded | Width | Height | Weight | Load Limit |
|-----------|--------------|--------------|-------------|-------------|--------------|-----------------|
| Scoop EXL | 79" (201 cm) | 47" (119 cm) | 17" (43 cm) | 3" (8 cm) | 18 lb (8 kg) | 350 lb (159 kg) |
| Model 65 | 79" (201 cm) | 47" (119 cm) | 17" (43 cm) | 3 ½" (9 cm) | 16 lb (7 kg) | 350 lb (159 kg) |
| Model 64 | 76" (193 cm) | NA | 17" (43 cm) | 2" (5 cm) | 13 lb (6 kg) | 400 lb (181 kg) |

Model 14 Slide-Under Body Lifter

This special lifter can be used without the attendant having to touch the body. Simply place the frame bars along the side of the body and draw the supports under it. The body lifter also makes it easy to handle the body or move it from the cot to the embalming table. Constructed of durable aluminum frame bars and four black, plastic-coated, nylon straps. Weighing only 4.5 lb itself, the lifter can carry up to 350 lb.

Product
Slide-Under Body Lifter

SKU
0101400



Ferno Transfer Board

Use the Ferno Transfer Board to transfer a patient between adjoining surfaces, such as a bed and a transport cot, or a transport cot and table. Weighing 4.5 lb, 45" long and 18" wide.

Product
Transfer Board

SKU
0107992



Beasy Trans™ Transfer Board

The Ferno Beasy Trans Transfer Board provides a safe and efficient way to transfer a sitting patient between adjoining surfaces, such as a bed and a transport cot. The unique sit-and-glide system reduces the effort needed by providers to move the patient. Weighing 6.5 lb, can carry up to 400 lb, 40" long and 12" wide.

Product
Beasy Trans™ Transfer Board

SKU
0779487



Model 132 Manta™ Retrieval Aid

This compact and easy-to-store retrieval aid is ideal for extracting bodies from confined areas. Eight reinforced hand-holds provide ample grasping points for removal personnel. Made of durable vinyl, the Manta can carry bodies weighing up to 800 lb.

Product
Model 132 Manta

SKU
0382969



SPECIFICATIONS

| | Length Open | Width | Height | Weight | Load Limit |
|----------|--------------|--------------|-------------|---------------|-----------------|
| Model 14 | 78" (200 cm) | 28" (72 cm) | NA | 4 ½ lb (2 kg) | 350 lb (159 kg) |
| Manta | 79" (200 cm) | 46" (107 cm) | 0.1" (¼ cm) | 5 lb (2.2 kg) | 800 lb (363 kg) |



Model 11-T Stretcher

The Model 11-T stretcher is sturdy and lightweight and has an innovative track system that allows removal down stairs with ease and more control. It has two front wheels and narrow track-to-ground clearance for easy maneuvering over all surfaces, even with tracks deployed. Folds in half when not in use for easy carrying and storage. Includes two 5' quick-release patient restraints and a footrest.

Product
Model 11-T Stretcher Burgundy

SKU
0108026



Model 11 Stretcher with Wheels

The Model 11 Stretcher is a simple, flat stretcher featuring a lightweight aluminum frame and a heavy-duty, bacteriostatic, vinyl-coated nylon cover. Exclusive slimline center hinges enable the stretcher to fold for compact storage. Includes two 5' quick-release patient restraints. For easy handling, Model 385-A Combination Storage and Carrying Case is available. The Model 11 comes in burgundy.

Product
Model 11 Stretcher

SKU
0101110

SPECIFICATIONS

| | Length Open | Length Folded | Width Open | Height Open | Weight | Load Limit |
|------------|--------------|---------------|---------------|-------------|---------------|-----------------|
| Model 11-T | 76" (193 cm) | 36 ½" (93 cm) | 19 ½" (50 cm) | 8" (20 cm) | 24 lb (11 kg) | 350 lb (159 kg) |
| Model 11 | 74" (187 cm) | 37" (94 cm) | 19" (47 cm) | 8" (20 cm) | 13 lb (6 kg) | 350 lb (159 kg) |

Model 131 Flexible Stretcher

Constructed of 18-ounce nylon and solid oak slats, the flexible stretcher's heat-sealed seams protect the slats and reinforce the overall construction. Three 2" webbing straps secure the carrier around the body and the six handles make it easy to carry the body. Available in burgundy.



Product
Model 131 Flexible Stretcher

SKU
0310161

Model 135 Stretcher/Body Bag

This combination flexible stretcher and body bag folds compactly and completely conceals the body. The two-ply, vinyl-coated nylon construction resists stain, does not absorb moisture or body fluids, is fire resistant, and is easily cleaned with a damp cloth. Features a full plastic zipper and six durable, permanently blocked formed handles. Available in burgundy.



Product
Model 135 Flexible Stretcher/Body Bag

SKU
0310180

Model 338 Disaster Pouch

Heavy-duty, vinyl-coated nylon fabric makes a sturdy pouch. This pouch features a full-length, brass zipper. Six strong, easy-to-grip carrying handles permit the pouch to be used as a litter. Available in burgundy.



Product
Model 338 Disaster Pouch

SKU
0311020

Model 347-1 Disposable Pouch

The disposable pouch is made of electronically sealed vinyl that resists abrasions, acid, formaldehyde and blood stains. Will not leak, deteriorate or mildew, and is not affected by temperature extremes. Available in white with your choice of U-shaped zipper, straight zipper, or tape closure.



Product
Model 347-1 Disposable Pouch, PEVA, Burnable

SKU
0314043

SPECIFICATIONS

| | Length | Width | Height | Weight | Load Capacity |
|------------------|---------------|--------------|--------|-----------------|-----------------|
| Model 131 | 74½" (189 cm) | 26½" (67 cm) | NA | 16 lb (7.26 kg) | 500 lb (227 kg) |
| Combi 135 | 77" (196 cm) | 27" (69 cm) | NA | 17 lb (7.7 kg) | 500 lb (227 kg) |
| Disaster 338 | 90" (321 cm) | 36" (92 cm) | NA | NA | 350 lb (159 kg) |
| Disposable 347-1 | 90" (321 cm) | 36" (92 cm) | NA | NA | NA |



24-MAXX® First Call Cover

The extra-large 24-MAXX First Call Cover is specially designed for large bodies. The 24-MAXX Cover fits the 24-MAXX, 24-MiniMAXX, Model 24 and Model 27-1 cots. It is only available in the Crypton® Aria fabric. Includes a 12" x 14" pocket.

| Product | SKU |
|------------------------------------|---------|
| 24-MAXX First Call Cover, Cabernet | 0314154 |
| 24-MAXX First Call Cover, Black | 0314155 |



Model 320 First Call Cover

The slip-over styling of this cover fits One-Man® Cots. Secured by elastic at both ends, the cover is reversible end-to-end. The cover fits cots approximately 76" x 20" (193 cm x 51 cm), which includes the Model 24 series and Model 27-1 series cots. It is available in the Crypton® Aria or Suede. Includes a 12" x 14" pocket.

| Suede | SKU | Aria | SKU |
|----------|---------|----------|---------|
| Fathom | 0314080 | Cabernet | 0314126 |
| Burgundy | 0314081 | Blue | 0314127 |
| Caviar | 0314082 | Platinum | 0314128 |
| | | Black | 0314129 |



Model 321 First Call Cover

This cover features tailored, slip-over styling and is reversible end-to-end. Fits cots 76" x 23" (193 cm x 58 cm), which includes the Model 24 series and Model 23 series cots. It is available in the Crypton® Aria or Suede. Includes a 12" x 14" pocket.

| Suede | SKU | Aria | SKU |
|----------|---------|----------|---------|
| Fathom | 0314086 | Cabernet | 0314130 |
| Burgundy | 0314087 | Blue | 0314131 |
| Caviar | 0314088 | Platinum | 0314132 |
| | | Black | 0314133 |



Model 325 First Call Cover

With elastic on one end, this slipcover fits folding stretchers approximately 74" x 21" (188 cm x 53 cm). It is available in the Crypton® Aria or Suede. Includes a 12" x 14" pocket.

| Suede | SKU | Aria | SKU |
|----------|---------|----------|---------|
| Fathom | 0314068 | Cabernet | 0314134 |
| Burgundy | 0314069 | Blue | 0314135 |
| Caviar | 0314070 | Platinum | 0314136 |
| | | Black | 0314137 |



Model 330 First Call Cover

This cover fits One-Man® cots, most stretchers and standard cots and has a full-length brass zipper. The cover features snap-fastener tabs that hold it in place beneath the mattress and it has full-expansion restraint strap slots. Fits cots approximately 75" x 23" (191 cm x 58 cm). It is available in the Crypton® Aria or Suede. Includes a 12" x 14" pocket.

| Suede | SKU | Aria | SKU |
|----------|---------|----------|---------|
| Fathom | 0314092 | Cabernet | 0314138 |
| Burgundy | 0314093 | Blue | 0314139 |
| Caviar | 0314094 | Platinum | 0314140 |
| | | Black | 0314141 |

Model 335 First Call Pouch

The First Call Pouch comes complete with a bottom and full-length brass zipper. The pouch is secured by snap fastener tabs and features full expansion restraint strap slots. Fits One-Man® cots and stretchers approximately 75" x 23" (191 cm x 58 cm). It is available in the Crypton® Aria or Suede. Includes a 12" x 14" pocket.

| Suede | SKU | Aria | SKU |
|----------|---------|----------|---------|
| Fathom | 0314074 | Cabernet | 0314142 |
| Burgundy | 0314075 | Blue | 0314143 |
| Caviar | 0314076 | Platinum | 0314144 |
| | | Black | 0314145 |



24-MAXX® & 24-MiniMAXX® First Call Pouch

The First Call Pouch comes complete with a bottom and full-length brass zipper. The pouch is secured by snap fastener tabs and features full expansion restraint strap slots. The pouch also has snaps to expand for larger bodies. Fits One-Man® cots and stretchers approximately 75" x 24" (191 cm x 61 cm). It is only available in the Crypton® Aria fabric. Includes a 12" x 14" pocket.

| Product | SKU |
|--|---------|
| 24-MAXX & 24-MiniMAXX First Call Pouch, Cabernet | 0314156 |
| 24-MAXX & 24-MiniMAXX First Call Pouch, Black | 0314157 |
| 24-MAXX & 24-MiniMAXX First Call Pouch, Blue | 0314187 |
| 24-MAXX & 24-MiniMAXX First Call Pouch, Platinum | 0314188 |



Crypton® Fabrics

Ferno Covers and Pouches are now made with patented Crypton® Aria and Suede. Every fiber is encapsulated with a stain, odor and bacteria-resistant barrier. The breathable moisture barrier is permanently integrated into the fabric, ensuring a complete and proven performance system from the fibers up. Nothing can penetrate the fibers or the barrier. The Aria and Suede may be spot cleaned or machine washed when excessively soiled.



Monogramming

Tastefully display your funeral home's name with satin-stitched monogrammed covers and pouches. This service is available on all Ferno covers and pouches.

Lettering can be ordered in standard English Capitals or Script that is 1½", 2", or 3" tall and in a variety of colors. Multiple lines available and length dependent on letter size.

Please allow 4 weeks for delivery.



Model 101-H Hydraulic Operating Table



Product Overview

Allows quick height and angle adjustments using the three foot pedals. Either end of the table may be raised or lowered to any position between 28½" and 40½" above the floor for easy preparation from a standing or sitting position. The table top is convex to drain fluids away from the body and an extra-deep trough runs the perimeter of the table, reducing the need for splash guards. A drain in the center of the foot end quickly eliminates fluids from the table. Four 8" swivel wheels lock instantly with a single foot pedal or one set of wheels locks directionally for easy rolling. Type 304 stainless steel with a 3 finish ensures easy maintenance and a solid surface base eliminates crevices where liquids can accumulate.

Key Features

- Three foot pedals for quick height and angle adjustments
- Convex table top to drain fluids away from body
- Extra-deep trough reduces need for splash guards
- Center drain at foot end to eliminate fluids
- Four wheels lock instantly with a single foot pedal
- 304 stainless steel ensure's ease of maintenance

Product

NSN: 9930-00-164-0648
101-H Hydraulic Operating Table

SKU

0661010

*Model 101-H with Side Extension Panels
(Sold Separately)*

SPECIFICATIONS

| | Length | Width | Height Max. | Height Min. | Wheelbase | Weight | Load Limit |
|-------|-----------------|----------------|------------------|-----------------|------------------------------|-------------------|-------------------|
| 101-H | 80" (203 cm) | 30" (76 cm) | 40½" (103 cm) | 28½" (72 cm) | 24½" x 48½" (62 x 123 cm) | 158 lb (72 kg) | 600 lb (272kg) |



Four 8" Swivel Wheels lock instantly with a single foot pedal or one set of wheels directionally locks for easy rolling.



Three Foot Pedals provide quick height and angle adjustments.



Multiple Positions at either end from 28½" to 40½" above the floor for easy preparation from a standing or sitting position.



Drain in the center of the foot end quickly eliminates fluids from the table.

Accessories



38-BB Body Bridge
0695790



Side Extension Panel (SEP)



Product

- Side Extension Panels (each)
- Side Extension Storage Bracket
- Side Extension Panel Kit

SKU

- 0695796
- 0695797
- 000SEPKIT

Model 102 Folding Operating Table



Add-On Features



Adjustable Height



Folds for Storage



38-BB Body Bridge
0695790



Side Extension Panels (SEP)
SEP (each) 0695796

Product Overview

A true combination table, ideal for embalming, dressing and transferring. An exclusive, one-hand release easily adjusts either end of the table from 32½" to 38½" with the ends being independently adjustable. The table is constructed of a stainless steel top with a convex surface, tubular aluminum frame, and 6" wheels with ball bearings. The swivel wheels lock to keep the table stationary while in use. The drain, located in the center of the foot end, quickly eliminates fluid from the table. Folds for storage when not in use and can stand on one end for storage behind a door or in a closet.

Key Features

- Combination table for embalming, dressing and transferring
- Exclusive one-hand release for adjustments
- Stainless steel top
- Folds for storage

Product

Model 102 Folding Operating Table

SKU

0661020

SPECIFICATIONS

| | Length | Width | Height Max. | Height Min. | Wheelbase | Weight | Load Limit |
|-----------|-----------------|----------------|-----------------|-----------------|-----------------------------|-------------------|---------------------|
| Model 102 | 80" (205 cm) | 30" (77 cm) | 38¾" (98 cm) | 32¾" (83 cm) | 64" x 27¼" (163 x 69 cm) | 87 lb (39½ kg) | 1000 lb (454 kg) |

Model 103 Combination Operating Table



Add-On Features



6" Wheels



38-BB Body Bridge
0695790



Side Extension Panels (SEP)
SEP (each) 0695796
Storage Bracket 0695797
SEP Kit 000SEPKIT

Product Overview

A multipurpose table, ideal for embalming, dressing and transferring. For added convenience, each end can be adjusted independently for individual working height and drainage.

The stainless steel top is durable and rigid, featuring a convex surface and deep side troughs for efficient drainage. Six-inch wheels with locks keep the table stationary while in use.

Key Features

- Multipurpose for embalming, dressing and transferring
- Stainless steel top
- Wheels lock while table is in use

Product

Model 103 Combination Operating Table

SKU

0661030

SPECIFICATIONS

| | Length | Width | Height Max. | Height Min. | Wheelbase | Weight | Load Limit |
|-----------|-----------------|----------------|-----------------|-----------------|----------------------------|------------------|---------------------|
| Model 103 | 80" (205 cm) | 30" (77 cm) | 37½" (95 cm) | 31½" (80 cm) | 53" x 27" (136 x 69 cm) | 80 lb (36 kg) | 1000 lb (454 kg) |

Model 4000 Ultra Care™ Lift



Add-On Features



Battery Pack



Hand Control



Emergency Stop



Wheel Locks

Product Overview

Easy to maneuver, requiring minimal effort from only one person to lift and carry bodies or caskets. Simply press a button on the hand-held pendant and the lift gently raises or lowers loads up to 750 lb. The control unit has an integrated rechargeable battery that can be charged by plugging the lift into a standard 115VAC wall outlet. Easily disassembles for convenient transportation and storage.

Key Features

- Allows for one-person operation
- Push button to raise and lower loads up to 750 lbs
- Integrated, rechargeable battery

Product

| | |
|--|---------|
| Model 4000 Ultra Care Lift with Hand Control | 0663914 |
| Restraint (Single) | 0313872 |
| Restraint Kit (Set of 4) | 0663913 |

SKU

SPECIFICATIONS

| | Boom Height Raised | Boom Height Lowered | Base Width | Base Length Folded | Base Length Unfolded | Mast Length | Mast Width | Weight | Load Limit |
|------------|--------------------|---------------------|-----------------|--------------------|----------------------|-----------------|----------------|-------------------|--------------------|
| Model 4000 | 77" (196 cm) | 50" (127 cm) | 39" (100 cm) | 27" (69 cm) | 43" (110 cm) | 60" (153 cm) | 17" (43 cm) | 168 lb (76 kg) | 750 lb (340 kg) |

Model 34 Folding Dressing Table

The Model 34 Dressing Table unfolds quickly for use and stores compactly when not in use. The two-piece, laminated top resists scratches and stains and can be cleaned in seconds. Four 6" swivel wheels are equipped with locks. Please specify grey or wood grain laminated table top when ordering.

The Model 34 Dressing Table is now available in a wider version. The Model 34W includes the same features as the regular width Model 34, but is 29" (74 cm) wide.

- Model 34, Wood Grain Top 0663401
- Model 34, Grey Top 0663402
- Model 34W, Wood Grain Top 0663919
- Model 34W, Grey Top 0663920



Wood Grain Grey



Folded

Model 36 Dressing Table

An exclusive, one-hand release on the Model 36 allows you to quickly adjust the table height from 32" to 38". The Model 36 rolls on four 6" swivel wheels that lock directionally for stability. Specify grey or wood Grain laminated table top when ordering.

The Model 36 Dressing Table is now available in a wider version. The Model 36W includes the same features as the regular width Model 36, but is 29" (74 cm) wide.

- Model 36, Wood Grain Top 0663601
- Model 36, Grey Top 0663602
- Model 36W, Wood Grain Top 0663923
- Model 36W, Grey Top 0663924



Wood Grain Grey



Adjustable Height



Height Adjustment at Both Ends



6" Wheels

SPECIFICATIONS

| | Length Open | Length Folded | Width | Height Open/Max. | Folded/Min. | Weight | Load Capacity |
|----------|-----------------|----------------|-----------------|------------------|-----------------|------------------|--------------------|
| Model 34 | 77" (196 cm) | 16" (41 cm) | 24½" (62 cm) | 34" (86 cm) | 59" (150 cm) | 68 lb (31 kg) | 500 lb (227 kg) |
| Model 36 | 77" (196 cm) | NA | 24½" (62 cm) | 38" (97 cm) | NA | 77 lb (35 kg) | 500 lb (227 kg) |

Cemetery Church Truck



Add-On Features



Folds Compactly



8" Pneumatic Wheels

Product Overview

Made of strong, rectangular aluminum tubing, featuring a protective gloss-anodized finish, keeps the truck looking new and makes it easy to clean. The stable x-frame undercarriage and rubber bumpers help secure the casket. Large, eight-inch pneumatic wheels roll easily over grass or rough terrain. With four swivel wheels allowing for greater maneuverability and two wheel locks. When moved without a casket a special built-in center handle allows the truck to be pushed, pulled or carried. Includes four side handles for lifting over curbs.

The Cemetery Church Truck locks into four positions, allowing a wide range of casket sizes to be displayed with one truck. The additional length increases stability and makes an attractive appearance. Available in silver, bronze, gold, blue-grey or onyx finish.

Not compatible with drape frames or drapes.

Key Features

- Superior craftsmanship to maintain finish and allow for easy cleaning
- Stable x-frame to secure casket
- Suitable for grass or rough terrain
- Locks into four positions to allow for a range of casket sizes

Product

| Product | SKU |
|-----------------------------------|---------|
| Cemetery Church Truck (Silver) | 0618883 |
| Cemetery Church Truck (Bronze) | 0618884 |
| Cemetery Church Truck (Gold) | 0618885 |
| Cemetery Church Truck (Blue-Grey) | 0618886 |
| Cemetery Church Truck (Onyx) | 0618887 |

SPECIFICATIONS

| | |
|---------------------|--------------------|
| Length | |
| Folded | 7" (17 cm) |
| 1st Position | 19" (49 cm) |
| 2nd Position | 30" (75 cm) |
| 3rd Position | 50" (128 cm) |
| Fully Extended | 61" (156 cm) |
| Height | |
| Folded | 33" (83 cm) |
| Fully Extended | 25" (64 cm) |
| Width | 18" (46 cm) |
| Wheel Size | 8" (20 cm) |
| Weight | 59 lb (27 kg) |
| Maximum Load | 1000 lb (454 kg) |

Model 87 Church Truck


Made of strong, rectangular aluminum tubing, with a protective gloss-anodized finish that keeps the truck looking new and makes it easy to clean. The stable x-frame undercarriage and rubber bumpers help to secure the casket. Six-inch rubber wheels roll easily over carpet, sills and other obstacles with quiet dignity. When moved without a casket, a special built-in center handle allows the truck to be pushed, pulled or carried. The Model 87 Church Truck locks into four positions, allowing a wide range of casket sizes to be displayed with one truck. The additional length increases stability and makes an attractive appearance. Available in bronze, gold, blue-grey, silver or onyx finish.

Key Features

- Superior craftsmanship to maintain finish and allow for easy cleaning
- Stable x-frame to secure casket
- Six-inch wheels to roll easily over a variety of terrain
- Locks into four positions to allow for a range of casket sizes

Product

| Product | SKU |
|---|---------|
| Model 87 Church Truck, Bronze | 0618861 |
| Model 87 Church Truck, Gold | 0618862 |
| Model 87 Church Truck, Blue-Grey | 0618863 |
| Model 87 Church Truck, Silver | 0618860 |
| Model 87 Church Truck, Onyx | 0618864 |
| Model 87 Church Truck with Handles, Bronze | 0618866 |
| Model 87 Church Truck with Handles, Gold | 0618867 |
| Model 87 Church Truck with Handles, Blue-Grey | 0618868 |
| Model 87 Church Truck with Handles, Silver | 0618865 |
| Model 87 Church Truck with Handles, Onyx | 0618869 |

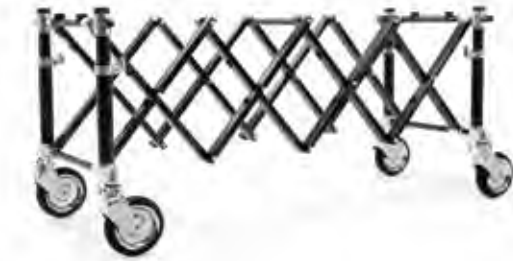

MODEL 87 SPECIFICATIONS

Length

| | |
|----------------|--------------|
| Folded | 6" (16 cm) |
| 1st Position | 19" (50 cm) |
| 2nd Position | 30" (77 cm) |
| 3rd Position | 50" (127 cm) |
| Fully Extended | 61" (155 cm) |

Height

| | |
|----------------|-------------|
| Folded | 29" (74 cm) |
| Fully Extended | 22" (56 cm) |

| | |
|--------------|-------------|
| Width | 18" (46 cm) |
|--------------|-------------|

| | |
|-------------------|------------|
| Wheel Size | 6" (15 cm) |
|-------------------|------------|

| | |
|---------------|---------------|
| Weight | 36 lb (16 kg) |
|---------------|---------------|

| | |
|---------------------|------------------|
| Maximum Load | 1000 lb (454 kg) |
|---------------------|------------------|

Model 88 Church Truck

Designed for those who prefer a compact truck, the Model 88 extends to 47" long. The church truck is constructed of the same rectangular, anodized aluminum tubing used on the Model 87 Church Trucks. Features 6" wheels and three locking frame positions. Available in bronze, gold, blue-grey, silver or onyx finish.

Key Features

- Six-inch wheels with three locking frame positions
- Constructed of anodized aluminum tubing
- Extends to 47"

Product

| Product | SKU |
|--|---------|
| Model 88 Church Truck, Silver | 0618870 |
| Model 88 Church Truck, Bronze | 0618871 |
| Model 88 Church Truck, Gold | 0618872 |
| Model 88 Church Truck, Blue-Grey | 0618873 |
| Model 88 Church Truck, Onyx | 0618874 |
| Model 88 Church Truck with Handles, Silver | 0618875 |



MODEL 88 SPECIFICATIONS

Length

| | |
|----------------|--------------|
| Folded | 6" (16 cm) |
| 1st Position | 16" (41 cm) |
| 2nd Position | 24" (60 cm) |
| 3rd Position | 38" (97 cm) |
| Fully Extended | 47" (118 cm) |

Height

| | |
|----------------|-------------|
| Folded | 29" (74 cm) |
| Fully Extended | 22" (56 cm) |

| | |
|--------------|-------------|
| Width | 18" (46 cm) |
|--------------|-------------|

| | |
|-------------------|------------|
| Wheel Size | 6" (15 cm) |
|-------------------|------------|

| | |
|---------------|---------------|
| Weight | 32 lb (14 kg) |
|---------------|---------------|

| | |
|---------------------|------------------|
| Maximum Load | 1000 lb (454 kg) |
|---------------------|------------------|



Model 87-F/88-F Drape Frame Attachments

The Model 87-F and 88-F Drape Frame Attachments are metal lattice frames that attach to the church truck at six points to provide strong, yet lightweight drape mounting.

| Product | SKU |
|-----------------------------------|---------|
| Model 87-F Drape Frame Attachment | 0648700 |
| Model 88-F Drape Frame Attachment | 0648800 |



Blue Cardinal Black

Model 87-D/88-D Drapes

The Model 87-D and 88-D Velvet Drapes fit the Model 87 and 88 Church Trucks. Available in 3 colors: blue, cardinal, or black crushed velvet.

| Product | SKU |
|--------------------------------------|---------|
| Drape 87 – Crushed Velvet (Blue) | 0312900 |
| Drape 87 – Crushed Velvet (Cardinal) | 0312890 |
| Drape 87 – Crushed Velvet (Black) | 0314032 |
| Drape 88 – Crushed Velvet (Blue) | 0312970 |
| Drape 88 – Crushed Velvet (Cardinal) | 0312960 |
| Drape 88 – Crushed Velvet (Black) | 0314033 |

Model 401/402 Church Truck Covers

The Ferno church truck cover allows you to protect your church truck from dust and scratches while in storage. The Model 401 is designed for use on church trucks without drapes. The Model 402 is designed for use on church trucks with drapes. Available in black, cabernet, platinum or blue Crypton® Aria material.



Model 401 dimensions
27.5"L x 21.75"W x 8.25"D
(70 x 55 x 21 cm)

Model 402 dimensions
26"L x 27.75"W x 13.75"D
(66 x 70 x 35 cm)

| Product | SKU |
|--|---------|
| 401 Church Truck Cover – Aria Cabernet | 0314146 |
| 401 Church Truck Cover – Aria Blue | 0314147 |
| 401 Church Truck Cover – Aria Platinum | 0314148 |
| 401 Church Truck Cover – Aria Black | 0314149 |
| 402 Church Truck Cover – Aria Cabernet | 0314150 |
| 402 Church Truck Cover – Aria Blue | 0314151 |
| 402 Church Truck Cover – Aria Platinum | 0314152 |
| 402 Church Truck Cover – Aria Black | 0314153 |



Aria Black Aria Cabernet Aria Platinum Aria Blue

Model 110 Showroom Truck

The Model 110 is a dual-duty truck that works as a showroom and utility truck. The polished aluminum frame is exceptionally strong and will look like new for years with minimal maintenance. Rubber tips hold caskets or rough boxes firmly in place while five-inch ball-bearing wheels roll over obstacles with ease.

Product
Model 110 Showroom Truck

SKU
0611100



Model 110-F Drape Frame Attachment

The Model 110-F Drape Frame Attachment provides drape mounting for the Model 110 and Model 112 Showroom Trucks.

Product
Model 110-F Drape Frame Attachment

SKU
0641100



Model 110-D Showroom Truck Drape

The Model 110-D is a drape for the Models 110 and 112 Showroom Trucks. Available in blue or cardinal.

Product
Showroom Truck Drape (Blue)
Showroom Truck Drape (Cardinal)

SKU
0310060
0310050



Blue



Cardinal

SPECIFICATIONS

| | Length | Width | Height | Weight | Load Rating |
|-----------|-------------------|----------------|----------------|-----------------|--------------------|
| Model 110 | 44 ½" (113 cm) | 20" (51 cm) | 22" (56 cm) | 19 lb (9 kg) | 600 lb (272 kg) |

Model 112 Showroom Truck



Add-On Features




Model 110-F Drape Frame Attachment



Showroom Truck Drape



Blue

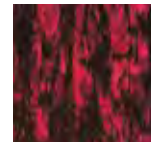

Cardinal

Product Overview

The extra-long and wide wheelbase provides exceptional stability and performs equally well as a utility truck. The strong aluminum frame will keep its high polish for years with a minimum of maintenance. Rubber tips hold caskets or rough boxes firmly in place and five-inch, ball-bearing wheels roll over obstacles with ease.

Key Features

- Extra-long, wide wheelbase
- Superior craftsmanship to maintain finish and allow for easy cleaning
- Performs as well as a truck
- Rubber tips hold caskets and boxes in place
- Five-inch ball-bearing wheels easily roll over obstacles

Product

| | |
|------------------------------------|---------|
| Model 112 Showroom Truck | 0611120 |
| Model 110-F Drape Frame Attachment | 0641100 |
| Showroom Truck Drape (Blue) | 0310060 |
| Showroom Truck Drape (Cardinal) | 0310050 |

SKU

SPECIFICATIONS

Length

| | |
|----------------|--------------|
| Folded | 7" (17 cm) |
| 1st Position | 19" (49 cm) |
| 2nd Position | 30" (75 cm) |
| 3rd Position | 50" (128 cm) |
| Fully Extended | 61" (156 cm) |

Height

| | |
|----------------|-------------|
| Folded | 33" (83 cm) |
| Fully Extended | 25" (64 cm) |

Width

| | |
|-------|-------------|
| Width | 18" (46 cm) |
|-------|-------------|

Wheel Size

| | |
|------------|------------|
| Wheel Size | 8" (20 cm) |
|------------|------------|

Weight

| | |
|--------|---------------|
| Weight | 59 lb (27 kg) |
|--------|---------------|

Maximum Load

| | |
|--------------|------------------|
| Maximum Load | 1000 lb (454 kg) |
|--------------|------------------|

Model 124

Adjustable Casket Table

The Model 124 Adjustable Casket Table adjusts to fit various vehicle sizes. By placing bier pins in the appropriate openings, the table will accommodate infant and child caskets as well. Bier pins sold separately.

| | |
|--------------------------------|------------|
| Product | SKU |
| Casket Table without Bier Pins | 0661224 |




Model 156 Roller System

The Model 156 Roller System allows any stock extended vehicle to carry a variety of equipment so your vehicle is always ready for use. The Model 156 accommodates caskets, cots and most airtrays. The only modification needed is removal of the bier pins. The Model 156 mounts to the floor and has the same style roller system as the Model 124, yet it can also carry a cot. (The Model 156 and 124 do not have the same mounting configuration.) Bier pins sold separately.

Note: The 156 roller system is not compatible with Ferno® 24-MAXX or 24-MiniMAXX series cots.

| | |
|-----------------------------------|------------|
| Product | SKU |
| Model 156 Roller System | 0663909 |
| Model 575 Bier Pin Storage Plate | 0815750 |
| Model 576 Bier Pin Set | 0695760 |
| Model 577 Adjustable Bier Pin Set | 0695770 |
| Model 577 Stationary Bier Pin | 0695780 |

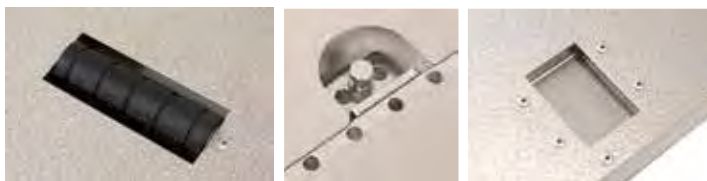

Tailgate Roller Assemblies

Tailgate Roller Assemblies available as single or dual assembly.

Single Roller Assembly

13" x 4" x 2"
(34 cm x 10 cm x 5 cm)

Dual Roller Assembly

24" x 4" x 2"
(60 cm x 10 cm x 5 cm)

| | |
|----------------------------------|------------|
| Product | SKU |
| Model 573 Single Roller Assembly | 0815730 |
| Model 574 Dual Roller Assembly | 0815740 |



Single Roller Assembly

Dual Roller Assembly

SPECIFICATIONS

| | Length Max | Width | Height | Weight | Load Capacity |
|-----------|----------------|--------------|-----------|-----------------|------------------|
| Model 124 | 92 ¼" (237 cm) | 27½" (71 cm) | 2" (5 cm) | 28 lb (12.7 kg) | 1000 lb (454 kg) |
| Model 156 | 89 ¼" (226 cm) | 24" (61 cm) | 2" (5 cm) | 40 lb (18 kg) | 1000 lb (454 kg) |

Ferno Makes it Easy to Place Your Order

To locate the nearest distributor or sales representative in your area: Call 1-877-733-0911 or FAX 1-888-388-1349. A Customer Relations Representative will ensure that your requirements are met.

Terms of Sale

Government-Funded Agencies will be granted "Net 30 Day" Open Accounts by providing the following information:

1. Name of government agency
2. Telephone and FAX numbers
3. Billing address (must be domestic location)
4. Shipping address
5. List of authorized purchasers (if restricted)
6. Purchase Order number requirements

Payment may also be made using Federal SmartPay Credit Cards, which will be charged at the time your order is shipped.

Freight Policy/ Shipping

All orders will be shipped by the most efficient and cost-effective ground transportation (UPS, DHL, truck, or USPS). Orders are shipped F.O.B. Wilmington, Ohio. Shipping charges are prepaid and will be added to the invoice. Airfreight or other special shipping arrangements can be made at the customer's request. Special shipping charges are prepaid and will be added to the invoice. Special-order and out-of-stock items will be back ordered and shipped as soon as possible; the customer will be notified of back orders. Partial orders will be shipped unless the customer provides other instructions. Additional shipping charges may apply to oversized items

Returning Merchandise

Ferno-Washington, Inc. reserves the right to refuse any unauthorized return shipment. Buyer must obtain a RMA (Return Material Authorization) number from Ferno-Washington, Inc. prior to return. Ferno-Washington, Inc. reserves the right to charge a 20% restocking fee on all return shipments.

Damaged Goods Claims

All claims for merchandise that is damaged during transit must be made by the customer directly to the carrier within 10 days of receipt of goods. Please save all boxes and packing material until you have filed your claim.

Disclaimers

Latex Content: Ferno relies on product information received from manufacturers and can accept no liability for misinformation or for changes in product content. Ferno strongly recommends that customers read all product labels for latex content information before using the products. **Product Changes:** Ferno reserves the right to change product specifications, price, and availability without notice.

Limited Warranty

For 55 years funeral home professionals have relied on Ferno products because Ferno stands behind its products. Ferno-Washington, Inc. warranties all mortuary equipment (see limited warranty below) to be free from defects in material and workmanship for a full two years, the longest in the industry. Under this limited warranty, Ferno will repair, replace or refund the purchase price of any Ferno piece of equipment as Ferno deems appropriate.

Ferno Mortuary products are warranted to be free from defects in material and workmanship for a period of one year, except as follows:

- External finishes (gelcoat, paint, powder coat, decals, etc.) are warranted for 90 days.
- Soft goods (webbing, vinyl, fabric, foam, etc.) are warranted for 90 days.
- Mortuary products (except for hydraulic parts and soft goods) are warranted for 2 years.

Ferno repairs are warranted for 90 days from the date of repair. This limited warranty applies only when you use and care for the product as described in the instructions provided with the product. Improper use and care may void this warranty. The warranty period begins the date the product was first purchased by you as the original end-user or the date you as the original end-user receive it if you have proof of the delivery date. The limited warranty is not transferable or assignable in any manner. Shipping charges are not covered by this limited warranty. Ferno is not liable for shipping damages or damages sustained through using the product.

Non-Ferno products sold by Ferno retain the product manufacturer's original warranties and guarantees. Such warranties and guarantees, if any, are solely those of the product manufacturer. Ferno offers no warranties or guarantees of any kind additional to those of the product manufacturer, nor does Ferno assume any liability for products manufactured by others.

Limitation of Liability

If a product is proven defective, Ferno will repair or replace it, or, at its option, refund the item's purchase price. In no event is Ferno liable for more than the selling price of the product. The purchaser accepts these terms in lieu of all damages. Except for the limited warranty above, Ferno makes no other

warranties, either expressed or implied. Ferno makes no implied warranties of merchantability and fitness for a particular purpose for its own product or for the products of others. In no event will Ferno be liable for any indirect or consequential damages sustained in connection with the delivery, use, or performance of its products. Under breach of limited warranty, any legal action for breach of the limited warranty must be filed within one year of the date the breach occurs or should have been discovered.

Limited Warranty Claims and Disputes

Contact Ferno Customer Service promptly if you receive a product from Ferno that you suspect is defective. A representative will assist you with the claim procedure. Before sending any product to Ferno, obtain a return authorization number from Ferno Customer Service.

Support

If at any time you require additional information, need technical specifications, have repair or maintenance questions or need any other information about our products, contact our Technical Support Department by calling 1-800-733-3766 or by emailing us at support@ferno.com. We have knowledgeable, dedicated Technical Support staff available to assist you regarding any question that you may have about your Ferno product.

Service

Ferno provides a number of service options to mortuary customers to aid in maintaining their Ferno products. Preventive maintenance, maintenance service and repair service is available nationwide through EMSAR, Ferno's authorized service provider. Skilled EMSAR service technicians operating from service centers across the country will come right to your location.

Maintenance

In addition to providing repair services, EMSAR also provides preventive maintenance services for Ferno products. Prepaid preventive maintenance contracts are available that include biannual or quarterly cleanings, complete inspections and preventive maintenance checks and service all for one low fee. Call us at 1-800-733-3766 or email info@ferno.com for more information and a quote for your service.

Index

| | |
|--|-------|
| C | |
| Church Trucks | |
| Cemetery Church Truck | 24 |
| Model 87 Church Truck | 25 |
| Model 88 Church Truck | 25 |
| Cots | |
| 24-MAXX Mortuary Cot | 5 |
| 24-MiniMAXX® Mortuary Cot | 4 |
| Mini Cot Roll-In Style Cot | 9 |
| Model 23 Roll-In Style Cot | 8 |
| Model 24 Multi-Level Cot | 6 |
| Model 27-1 Multi-Level Cot | 7 |
| Covers | |
| 24-MAXX® First Call Cover | 16 |
| Model 320 First Call Cover | 16 |
| Model 321 First Call Cover | 16 |
| Model 325 First Call Cover | 16 |
| Model 330 First Call Cover | 16 |
| Model 401/402 Church Truck Covers | 26 |
| D | |
| Drape Frame Accessories | |
| Model 87-F/88-F Drape Frame Attachments | 26 |
| Model 87-D/88-D Drapes | 26 |
| Model 110-D Showroom Truck Drape | 27 |
| Model 110-F Drape Frame Attachment | 27 |
| Dressing Tables | |
| Model 34 Folding Dressing Table | 23 |
| Model 36 Dressing Table | 23 |
| F | |
| Fasteners | |
| Model 5 Mortuary Fastener | 11 |
| Model 533 Wheel Cups | 11 |
| Model 534/535 Post Cups | 11 |
| L | |
| Lifting Aids | |
| Beasy Trans™ Transfer Board | 13 |
| Ferno Transfer Board | 13 |
| Model 14 Slide-Under Body Lifter | 13 |
| Model 132 Manta™ Retrieval Aid | 13 |
| M | |
| Mattresses | |
| 24-MAXX® Cot Mattress | 10 |
| 24-MiniMAXX® Cot Mattress | 10 |
| Model 372 Cot Mattress | 10 |
| Model 375 Tapered Cot Mattress | 10 |
| O | |
| Operating Tables | |
| Model 101-H Hydraulic Operating Table | 18-19 |
| Model 102 Folding Operating Table | 20 |
| Model 103 Combination Operating Table | 21 |
| P | |
| Pouches | |
| 24-MAXX® First Call Pouch | 17 |
| 24-MiniMAXX® First Call Pouch | 17 |
| Model 335 First Call Pouch | 17 |
| Model 338 Disaster Pouch | 15 |
| Model 347-1 Disposable Pouch | 15 |
| R | |
| Restraints | |
| Model 414-OL Over-The-Lap-Restraints | 10 |
| Model 414-R Wrist Restraints – Cot Sidearm | 10 |
| Model 415-AR Ankle Restraints | 11 |
| Model 430 Two-Piece Restraints | 11 |
| Rollers | |
| Model 124 Adjustable Casket Table | 29 |
| Model 156 Roller System | 29 |
| Tailgate Roller Assemblies | 29 |
| S | |
| Scoop™ Stretchers | |
| Model 64 Body Scoop™ Stretcher | 12 |
| Model 65 Scoop™ Stretcher | 12 |
| Ferno Mortuary Scoop EXL™ | 12 |
| Showroom Trucks | |
| Model 110 Showroom Truck | 27 |
| Model 112 Showroom Truck | 28 |
| Stretchers | |
| Model 11 Stretcher with Wheels | 14 |
| Model 11-T Stretcher | 14 |
| Model 131 Flexible Stretcher | 15 |
| Model 135 Stretcher/Body Bag | 15 |
| U | |
| Model 4000-Ultra Care™ Lift | 22 |



 **FERNO® MORTUARY**

FERNOMORTUARY.COM 937.382.1451

**FOR MORE INFORMATION, CONTACT
YOUR LOCAL FERNO DEALER.**

T 800.733.3766
F 937.382.6569
INFO@FERNO.COM

70 WEIL WAY
WILMINGTON, OHIO 45177
USA